



***Keep This Manual
With Heat Exchanger***

*Find additional information on
this model at kooltronic.com or
use the Technical Documents
QR code below.*

*Technical
Documents*



***ADVANTAGE SERIES KXRP47
AIR-TO-AIR
HEAT EXCHANGER

OPERATOR'S MANUAL***

CAUTION

**BEFORE INSTALLING AND
USING THIS HEAT EXCHANGER,
IT IS IMPORTANT THAT THIS
MANUAL BE READ AND
UNDERSTOOD THOROUGHLY**



***KOOLTRONIC, INC.
30 Pennington-Hopewell Road
Pennington, NJ 08534
609•466-3400
FAX: 609•466-1114
www.kooltronic.com***

TABLE OF CONTENTS

		Page
I.	Introduction	2
II.	Incoming Inspection	3
III.	Product Handling	3
IV.	Product Identification and Nameplate	3
V.	Principles of Operation	4
VI.	Specific Model Data	4-6
	Mounting	
	Drawings and Dimensions	
	Technical Data	
	Major Component Replacements	
	Wiring Diagram	
VII.	Maintenance	6
VIII.	Packing Procedure	7
IX.	Warranty	8

I. Introduction

Kooltronic Advantage Heat Exchangers are designed for outdoor and indoor applications with ambient temperatures from -20°F to 131°F and maximum allowable enclosure temperature of 160°F. These heat exchangers utilize a counterflow airstream, for maximum heat transfer efficiency in a closed-loop system, providing cooling within sealed electronic cabinets.

This Manual provides you with the necessary general information for properly installing and operating Kooltronic Heat Exchangers. Unit specific technical data and mounting instructions are presented later in the Manual.

II. Incoming Inspection

Kooltronic Heat Exchangers are designed, built, and packaged to withstand the shock and vibration normally associated with shipment by common carriers. Occasionally improper handling during shipping causes damage. Such handling could include unbanding of palletized shipments, failing to respect any carton handling instructions, falling off conveyors, excessive vibration, crushing, etc. Therefore, a thorough inspection should be done upon receipt of all shipments. Any carton tears, dents, scratches, or loose articles should be noted on the Freight Bill. Cartons should be opened promptly and the units inspected for CONCEALED DAMAGE.

An immediate claim **MUST** be filed with the freight carrier and an inspection requested. Retain all packing materials. Kooltronic cannot assume responsibility for Consignee's failure to file a timely freight claim.

III. Product Handling


- Do not attempt to operate your Kooltronic Heat Exchanger until you read and thoroughly understand this Manual.
- Before operating this unit, all electrical wiring must be checked to assure the proper connections.

CAUTION

Operate this unit only on the proper voltages and frequencies as noted on the nameplate.

IV. Product Identification and Nameplate

Each Kooltronic Heat Exchanger includes an identification nameplate. This nameplate provides:

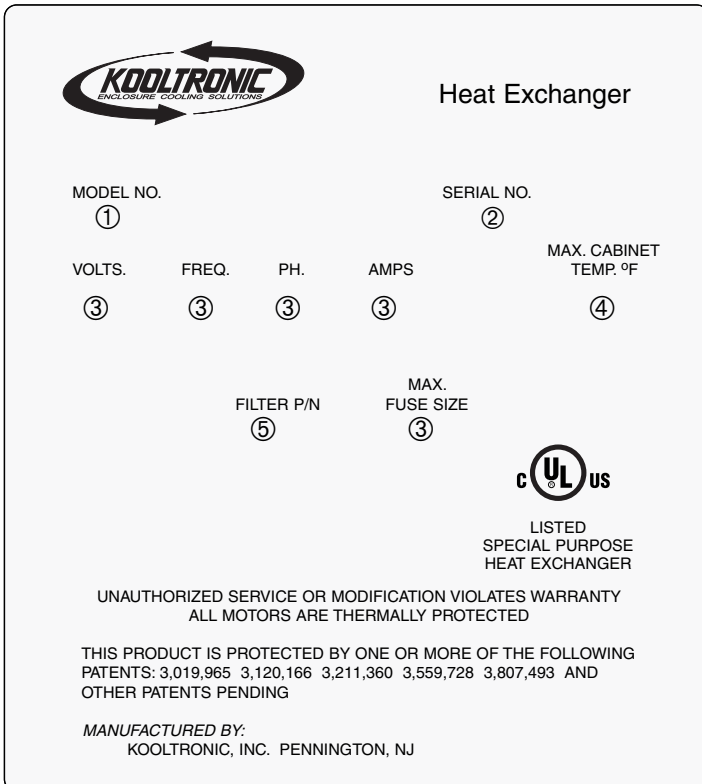

- ① Model Number
- ② Serial Number
- ③ Electrical power characteristics
- ④ Maximum enclosure temperature
- ⑤ Filter Part Number

We recommend you copy this information from your unit.


- ① ② ⑤ When ordering parts, specify the Model Number and Serial Number.
- ③ Before operating, be sure that the power source matches these requirements.
- ④ Make sure that these parameters are met. Failure to do so may result in permanent damage to the unit.

V. Principles of Operation

The main component of the heat exchanger is the counterflow aluminum element through which the heat transfer occurs.

Ambient blower draws ambient air from the bottom inlet through an aluminum mesh air filter, the element, and exhausts it through a discharge grill.

Cabinet blower draws cabinet air from the top inlet, blows it through the element and exhausts it through the bottom discharge into the cabinet.

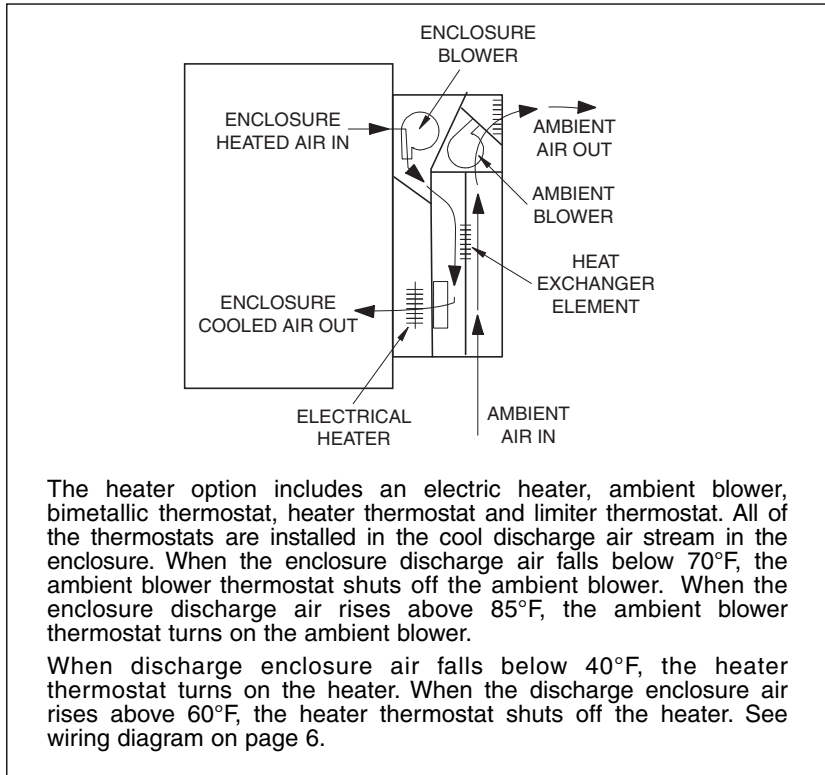


VI. Specific Model Data

Mounting

Kooltronic Heat Exchangers have been engineered to be installed easily. To avoid damaging your Heat Exchanger, please read the following information before installation:

1. Loosen the two screws on the bottom of the unit.
2. See Drawings and Dimensions for proper M/TAB orientation. Place the M/TAB flush against the outside of the enclosure to locate cutouts and mounting holes.
3. Mount the M/TAB to the outside of the cabinet using all the mounting hardware supplied by Kooltronic ($\frac{1}{4}$ -20 screws/nuts/washers). NOTE: Make sure the screws are inserted with heads on the M/TAB side.
4. Route the power cord through the bottom cut out in your cabinet. Mount the unit to the M/TAB by sliding the slots on each side panel into the hooks on the M/TAB.
5. Tighten the two screws on the bottom of the unit and seal against the enclosure.

Drawings and Dimensions

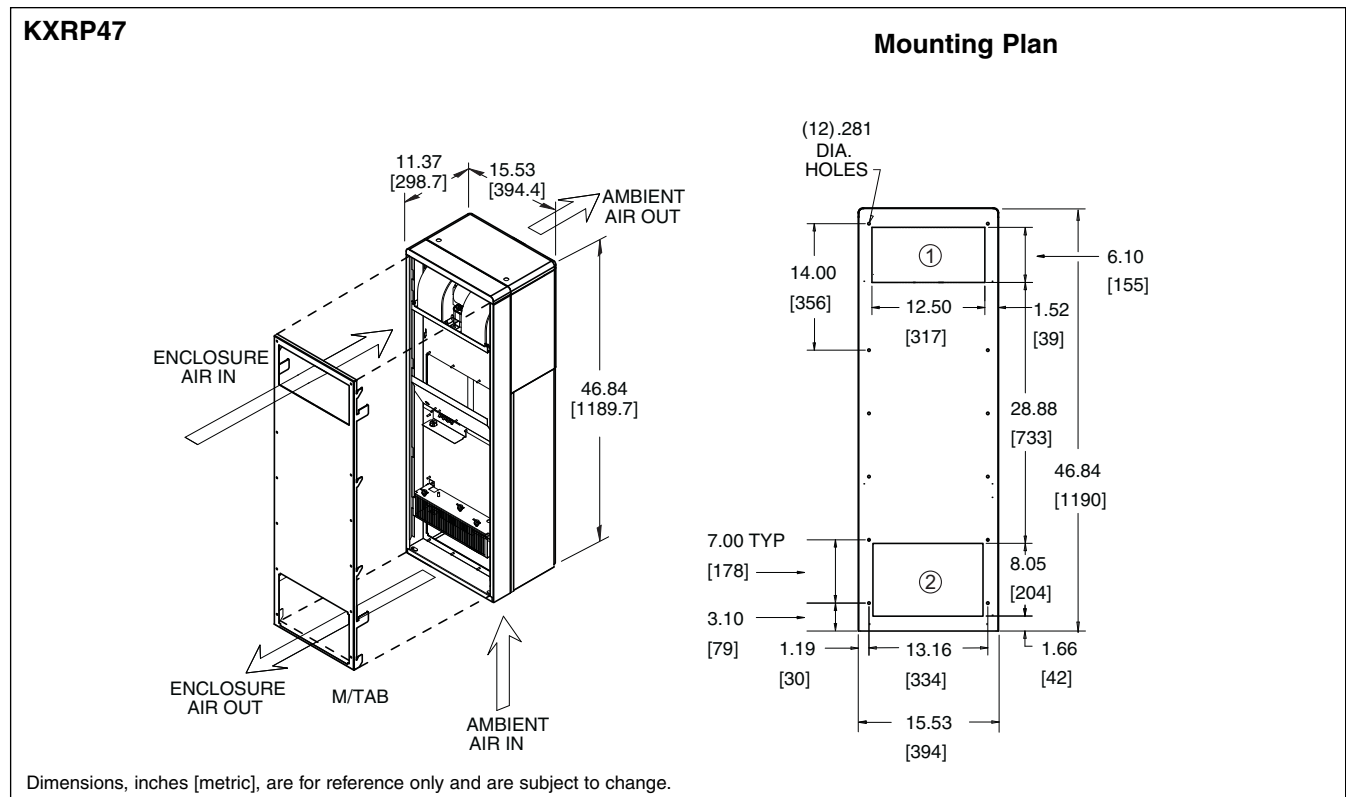

Technical Data*

Model	Power			Maximum Allowable Temperature °F		Watts/°F Air In	Approx. Weight (lbs.)
	Volts	Amps	Watts	Enclosure Max	Ambient Min/Max		
KXRP47	115	3.60	386	160	-20/131	54	86
K2XRP47	230	1.66	384	160	-20/131	54	86

*60 Hz operation. For 50 Hz operation consult Kooltronic


Major Component Replacements

Model	Blower Assembly	Counter Clockwise	Clockwise
		Blower Wheel	Blower Wheel
KXRP47	200047-00-42	S42-15-18ACCW5/	S42-15-18ACW5/1
K2XRP47	200047-00-63	S42-15-18ACCW5/	S42-15-18ACW5/1

Model	Capacitor	Blower Motor	Filter	Heat Exchanger
				Element
KXRP47	0452-03	0261-08	17121F	0741-07A
K2XRP47	0452-03	0261-54	17121F	0741-07A

NOTE: Part Numbers shown are for 60Hz/1Ø. For 50Hz consult Kooltronic.

Wiring Diagram

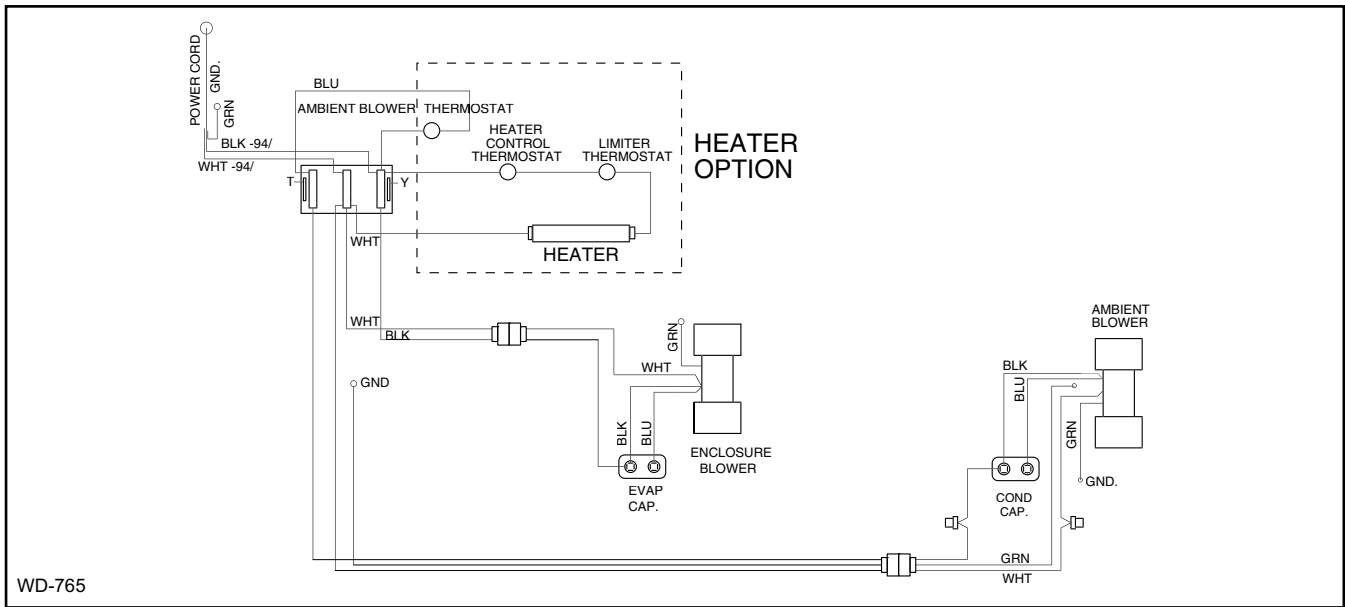

VII. Maintenance

Kooltronic Air-Cooled Heat Exchangers are designed to require only routine cleaning of air filters and the heat exchanger element to assure unimpeded air flow. Since the level and nature of air borne particulate matter differs with each installation, it is difficult to recommend specific filter cleaning intervals. However, it is generally sufficient to remove and wash the reusable aluminum mesh air filter when the outer surface of these filters appears covered with a thin layer of dust or lint. Filter recoating adhesive, (**Part No. A-16**), available from Kooltronic, is recommended. Appropriate disposable replacement filters are also available from Kooltronic.

If filter service is neglected or delayed, the heat exchanger will not perform at its designed capacity. The first indication of an excessively clogged air filter is a gradual increase of temperature within the equipment cabinet. Continued operation under these conditions may cause damage, shorten blower motor life and void the warranty.

Heat Exchanger Element Cleaning

1. Loosen and remove the (2) Torx screws on the top of the ambient blower box.
2. Move the ambient blower up and toward you and remove it from the front panel.
3. Disconnect the plug in the ambient blower.
4. Remove the ambient blower box from the unit.
5. Depending upon the amount of buildup, the heat exchanger could be cleaned by compressed air or by water from the top to the bottom.
6. Reinstall the ambient blower box:
 - a) Plug in the ambient blower connector.
 - b) Install the ambient blower box in the unit.
 - c) Tighten the ambient blower box to the unit with (2) Torx screws.

CAUTION

Disconnect electric power from the Heat Exchanger before proceeding.

Filter Removal and Service

Kooltronic Heat Exchangers feature an easily removable inlet filter to facilitate necessary cleaning.

CAUTION

Do not operate the Heat Exchanger for extended periods of time with the filter removed. The heat exchanger element may become clogged with dust or lint from the ambient environment. A clogged heat exchanger element will cause a gradual increase of temperature within the equipment cabinet. A clean filter is the best protection.

1. Loosen the screw on the bottom of the unit.
2. Move the filter toward you from the filter retainer.
3. After removal, the filter should be flushed under warm running water with the clean side up, driving contaminants out the dirty side of the filter. If the accumulated dirt is oily, washing in a detergent bath is recommended, followed by warm water rinse as above.
4. The filter may be sprayed with **Kooltronic A-16 Filter Recoating Adhesive** to trap fine airborne contaminants, or they can simply be dried and reinstalled as strainer type filters. **Recoating is recommended for the best results.**
5. Reinstall the filter:
 - a) Insert the filter in the filter retainer.
 - b) Tighten the screw on the bottom.

VIII. Packing Procedure

- Keep Heat Exchanger in proper upright position.
- Pack Heat Exchanger in an appropriate carton (preferably original carton if possible), with adequate internal protective packaging, making sure carton is marked properly.
- For local controlled transportation, strap carton to a secure part of the vehicle to prevent falling or sliding, and to minimize vibration, etc.
- For common carrier shipment, band unit(s) securely to a pallet. Unpalletized shipment risks severe damage which voids the warranty.

IX. Standard Warranty

KOOLTRONIC products are warranted to be free of defects in workmanship, materials and components. The following warranty periods apply from date of shipment:

- Air moving devices/components and hermetic system components: 1 year
- Spare parts, except filters: 90 days

The above warranty applies when the equipment is operated under the following conditions:

- Ambient temperature not in excess of 125°F (52°C) in normal atmosphere or as stated on product nameplate
- Voltage variation no greater than $\pm 10\%$ from nameplate rating
- Frequency variation no greater than $\pm 3\text{Hz}$ from nameplate rating
- Maximum cooling load no higher than air conditioner nameplate rating
- Waiting five minutes before restarting air conditioner after intentional or accidental shutoff
- Compliance to all other installation, maintenance and operating instructions, as supplied
- The purchaser assumes the responsibility of grounding the unit and installing it in accordance with local electrical and safety codes, as well as the National Electric Code (NEC) and OSHA

KOOLTRONIC cannot assume responsibility for mis-application of its products or the erroneous selection of an inappropriate product by a non-authorized KOOLTRONIC representative. Our applications engineers will gladly assist in the selection of the proper product, provided all required details of the application are furnished.

THIS WARRANTY CONSTITUTES THE ENTIRE WARRANTY WITH RESPECT TO THE PRODUCT AND IS IN LIEU OF ALL OTHERS, EXPRESSED OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY AND WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE AND IN NO EVENT IS KOOLTRONIC RESPONSIBLE FOR ANY CONSEQUENTIAL DAMAGES OF ANY NATURE WHATSOEVER.

RETURN AUTHORIZATION (RA) PROCEDURE

- All returns require a Return Authorization number whether the return is for warranty or non-warranty repair, rotation of stock, damage or any other reason. Returns without an RA number will be refused.
- Customer must call KOOLTRONIC After Sale Kare (ASK), Pennington, New Jersey (609 • 466 • 3400) to obtain an RA number, or email ask@kooltronic.com.
- The following information is required when an RA is requested:
 - Original customer Purchase Order number and date
 - Date product was received by customer
 - Number of parts to be returned
 - Product description, model and serial number
 - Reason for return
 - Action requested
 - Contact name, telephone, FAX numbers and e-mail address
- Pack unit in a suitable container for shipment, preferably the

KOOLTRONIC assumes no liability beyond the repair or replacement of its own product. This Warranty does not cover:

- Labor or reimbursement of labor for evaluation, removal, installation, repair, or cost of any warranted part, unless authorized in writing by KOOLTRONIC
- Use of equipment for other than its designed purpose or operating conditions
- Operation in harsh, oily, corrosive or other abnormal environmental conditions, without the proper filtration, sealing, protective coatings and/or weather protection
- Damage to hermetic system resulting from continuous operation with dirty or clogged air filters or improper or negligent maintenance
- Use of refrigerant other than designated
- Customer modification or abuse
- Shipping damage or other accident (Claims for shipping damage are the responsibility of the customer. Timely claims must be filed by the customer with the freight carrier)
- Cracked or broken hermetic tubing, brazed joints or other internal damage caused by shipping or mishandling
- Damage caused by shipping units attached to an enclosure
- Any and all conditions resulting from noncompliance with the preceding operating conditions
- Returned freight must be paid by customer
- **This standard warranty does not apply to custom products. Consult your KOOLTRONIC representative for limitations**

original packaging if available. All Heat Exchangers must be returned in an upright position properly secured to a pallet. **Improper packaging may void warranty claim.** If a Heat Exchanger is received laying down or shipped via UPS or similar small parcel service the warranty will be void.

- Mark carton prominently with KOOLTRONIC's Return Authorization Number.
- Enclose all pertinent documents.
- Freight charges on all products returned to KOOLTRONIC shall be paid by the customer. Unauthorized collect shipments will be refused.
- If a unit is repaired under Warranty, KOOLTRONIC will pay the freight charges both ways within the Continental USA at KOOLTRONIC's negotiated rates. Warranty repaired units will be returned to customer at KOOLTRONIC expense only within the Continental USA.
- All authorized returns are subject to a restocking fee.